



# Modular 2" x 6" Bunk Guide On's

## Installation Instructions

### Part #86295/86296



36" Center Section (1)



12" End Section (2)



Self Tapping Screws (3)

#### Part 86295 - Kit contains the following components:

#	Qty.	Part #	Description
1	4	46966	Center Bunk Slide (Black)
2	4	46964	12" End Bunk Slide (Black)
3	48	10630	#10x3/4" Stainless Steel Self Tapping Screws


#### Part 86296 - Kit contains the following components:

#	Qty.	Part #	Description
1	4	46966W	Center Bunk Slide (White)
2	4	46964W	12" End Bunk Slide (White)
3	48	10630	#10x3/4" Stainless Steel Self Tapping Screws

The Glide Ons are to be used on 2x6 bunk board lumber without any carpeting between the Glide Ons and wood.

1. Remove any carpet or other covering materials from bunk boards. Remove any brackets, screws, staples or other materials in order to have a clean work surface on top and both sides of the bunk boards.
2. Starting at the rear of the trailer, slide one of the 12" end section Glide Ons onto the 2x6 lumber with the open side to the front of the bunk board. Push the Glide On section onto the lumber until it is almost flush with the end of the bunk board (see Fig 1).

Fig. 1

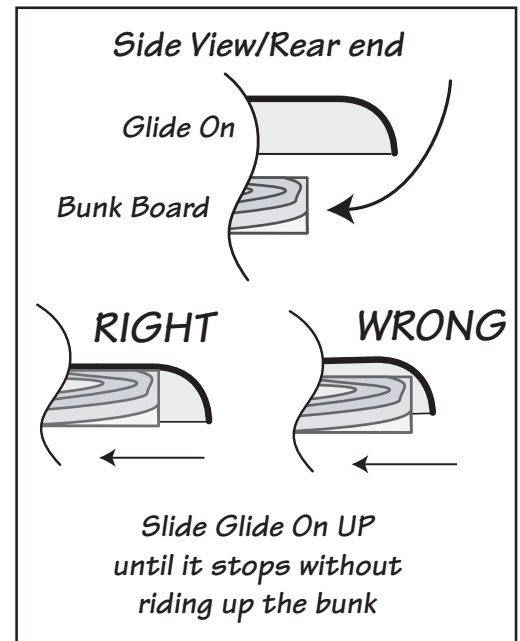

### WARNING

### WARNING

### WARNING

### WARNING



Boat Glide On's greatly reduce friction between boat and trailer bunk boards. Winch must be locked and winch line must be securely attached when launching, loading and transporting boat on trailer. Failure to keep boat secured at all times to boat trailer can result in serious property damage, personal injury and/or possible death. Prior to towing - always securely connect winch line, bow chain and transom tie down straps







# Modular 2" x 6" Bunk Guide On's

## Installation Instructions

Part #86295/86296

- Attach the 12" end section with the self tapping screws into the reinforced areas indicated on the sides of the Glide Ons.
- Slide the 36" Glide On up to the interlocking end of the secured Glide On. (see Fig 2).
- Attach using self tapping screws into the reinforced areas indicated on the sides of the Glide Ons. Repeat for the next 36" section.
- Place a 12" end section into the interlocking end of the attached 36" section.
- Complete installation with the self tapping screws into the reinforced areas indicated on the sides of the Glide Ons. The 12" Bunk Glide Ons may extend over the front end of the bunk, that's OK (not over the rear).
- Repeat steps 2-7 for the opposite side bunk.

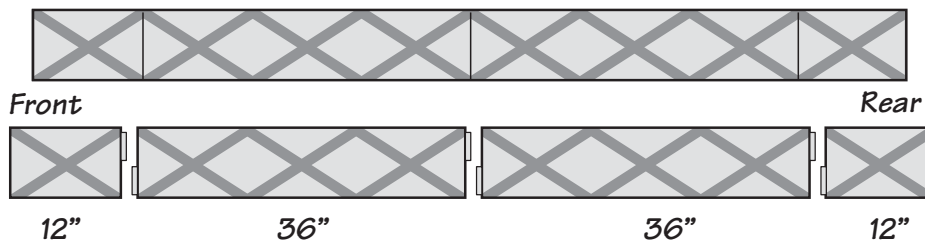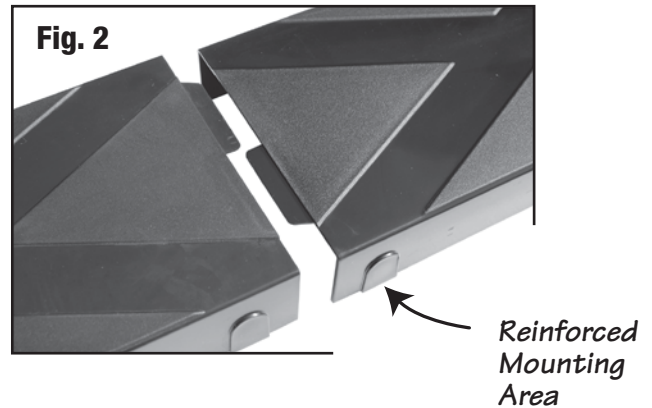

**WARNING      WARNING      WARNING      WARNING**



Boat Glide On's greatly reduce friction between boat and trailer bunk boards. Winch must be locked and winch line must be securely attached when launching, loading and transporting boat on trailer. Failure to keep boat secured at all times to boat trailer can result in serious property damage, personal injury and/or possible death. Prior to towing - always securely connect winch line, bow chain and transom tie down straps

